


ECU TERMINALS - VIEW FROM BACK OF CONNECTORS (WIRE)

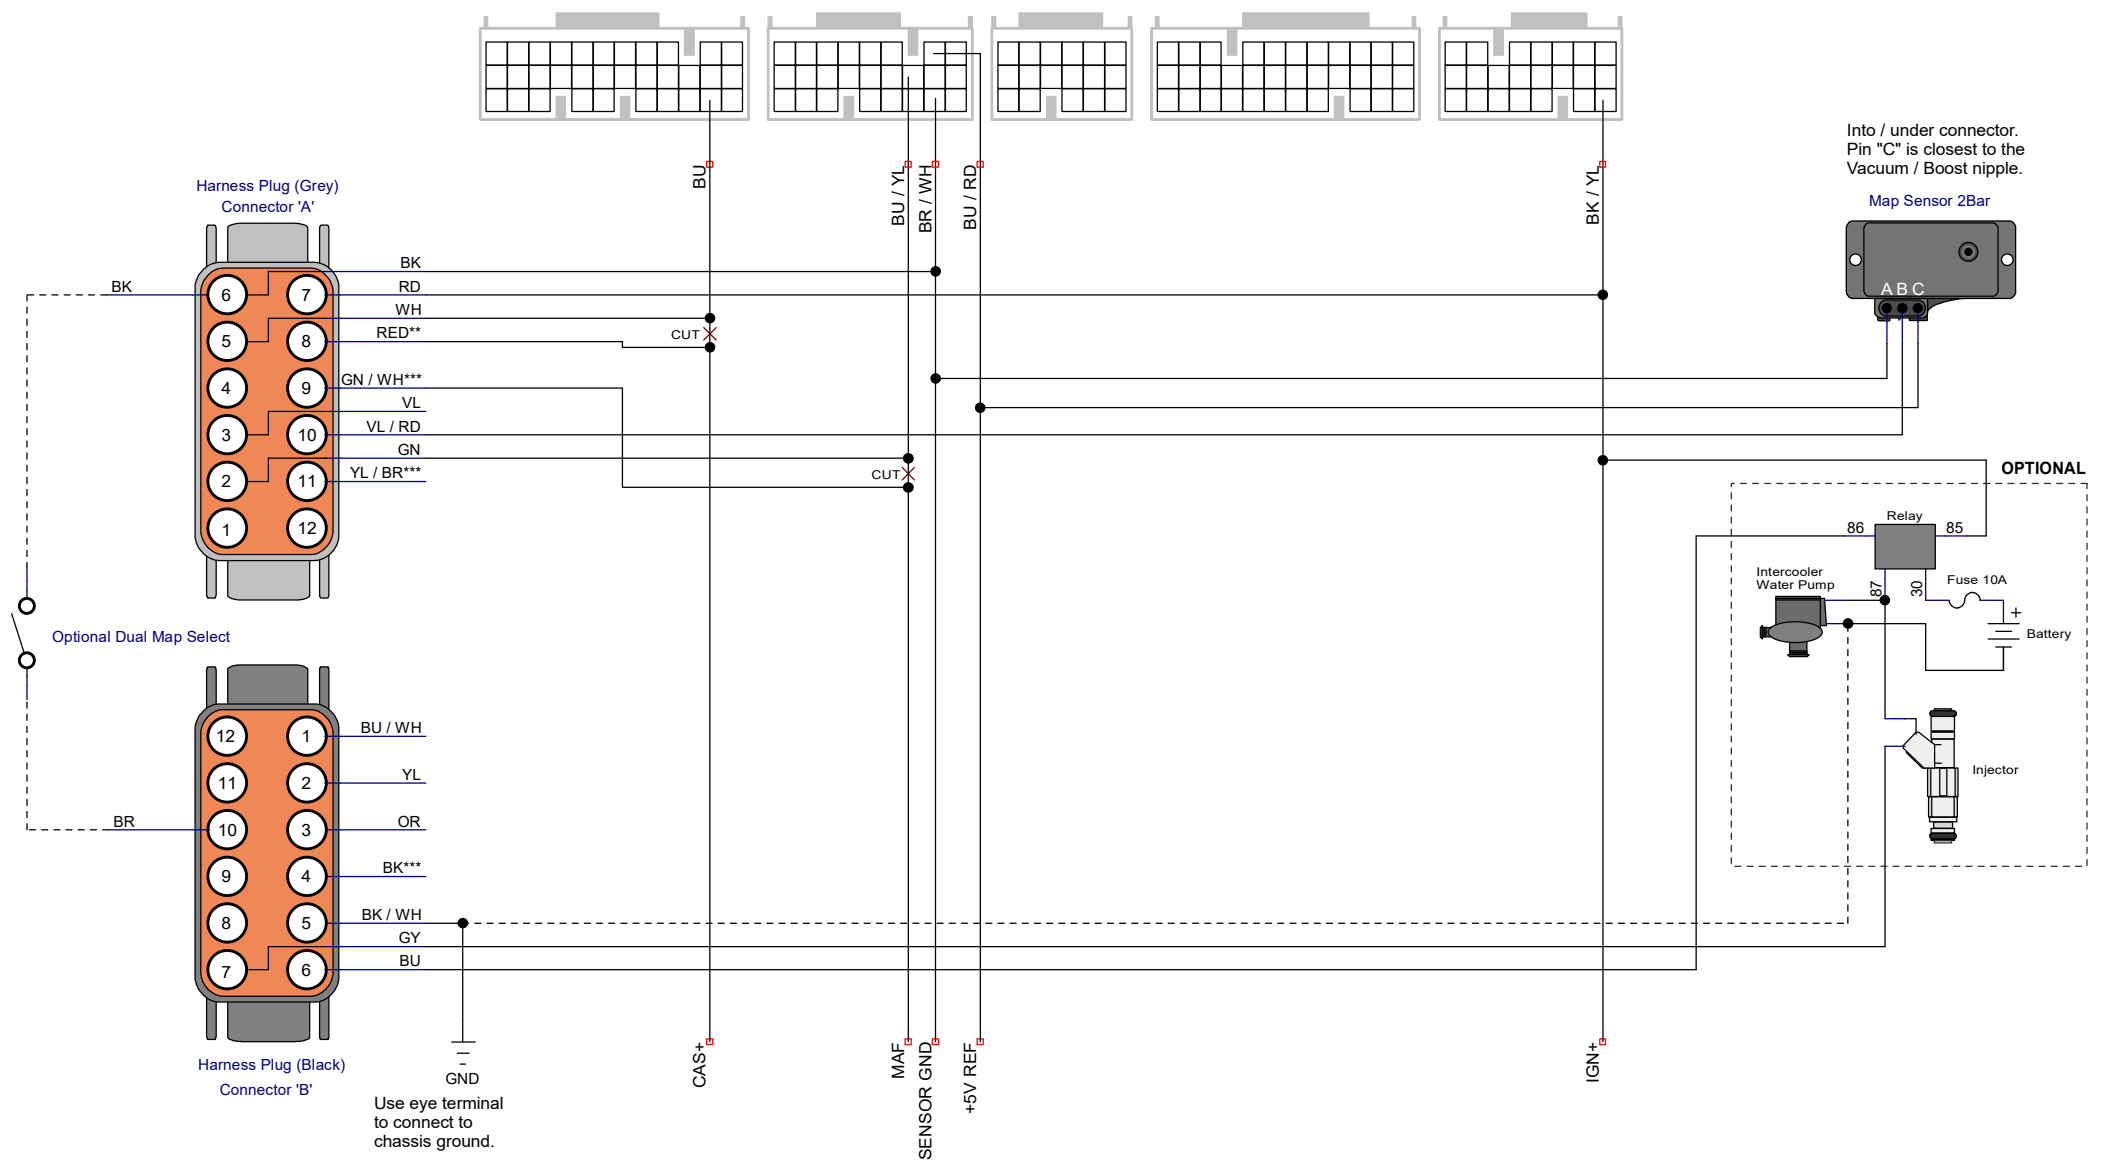

XEDE PROCESSOR WIRING DIAGRAM

* One or both chassis grounds must be connected if any of the following XEDE features are to be used: Water spray, boost control, auxiliary injector drive.

** Red wire in 3 core shielded cable.

*** Wire colour may have changed due to manufacturing shortages. Wire trace colour can change subject to availability. Function remains the same.

DO NOT terminate the shield wire in the 3 core cable.

On some versions of the harness there is 2 black wires, DO NOT use the black wire from the shielded cable unless specifically instructed.

On some versions of the harness there is 2 white wires, DO NOT use the white wire from the shielded cable unless specifically instructed.

Use only the RED wire from the shielded cable unless specifically instructed.

Title

Lexus LX470

Author

SMH

ChipTorque

File

y:CHIPTORQUE\Desktop\XWD\LX470 2UZ.dsn

Document

XWD

Revision

1.0

Date

12/09/2017

Sheets

1