


ECU TERMINALS - VIEW FROM BACK OF CONNECTORS (WIRE)

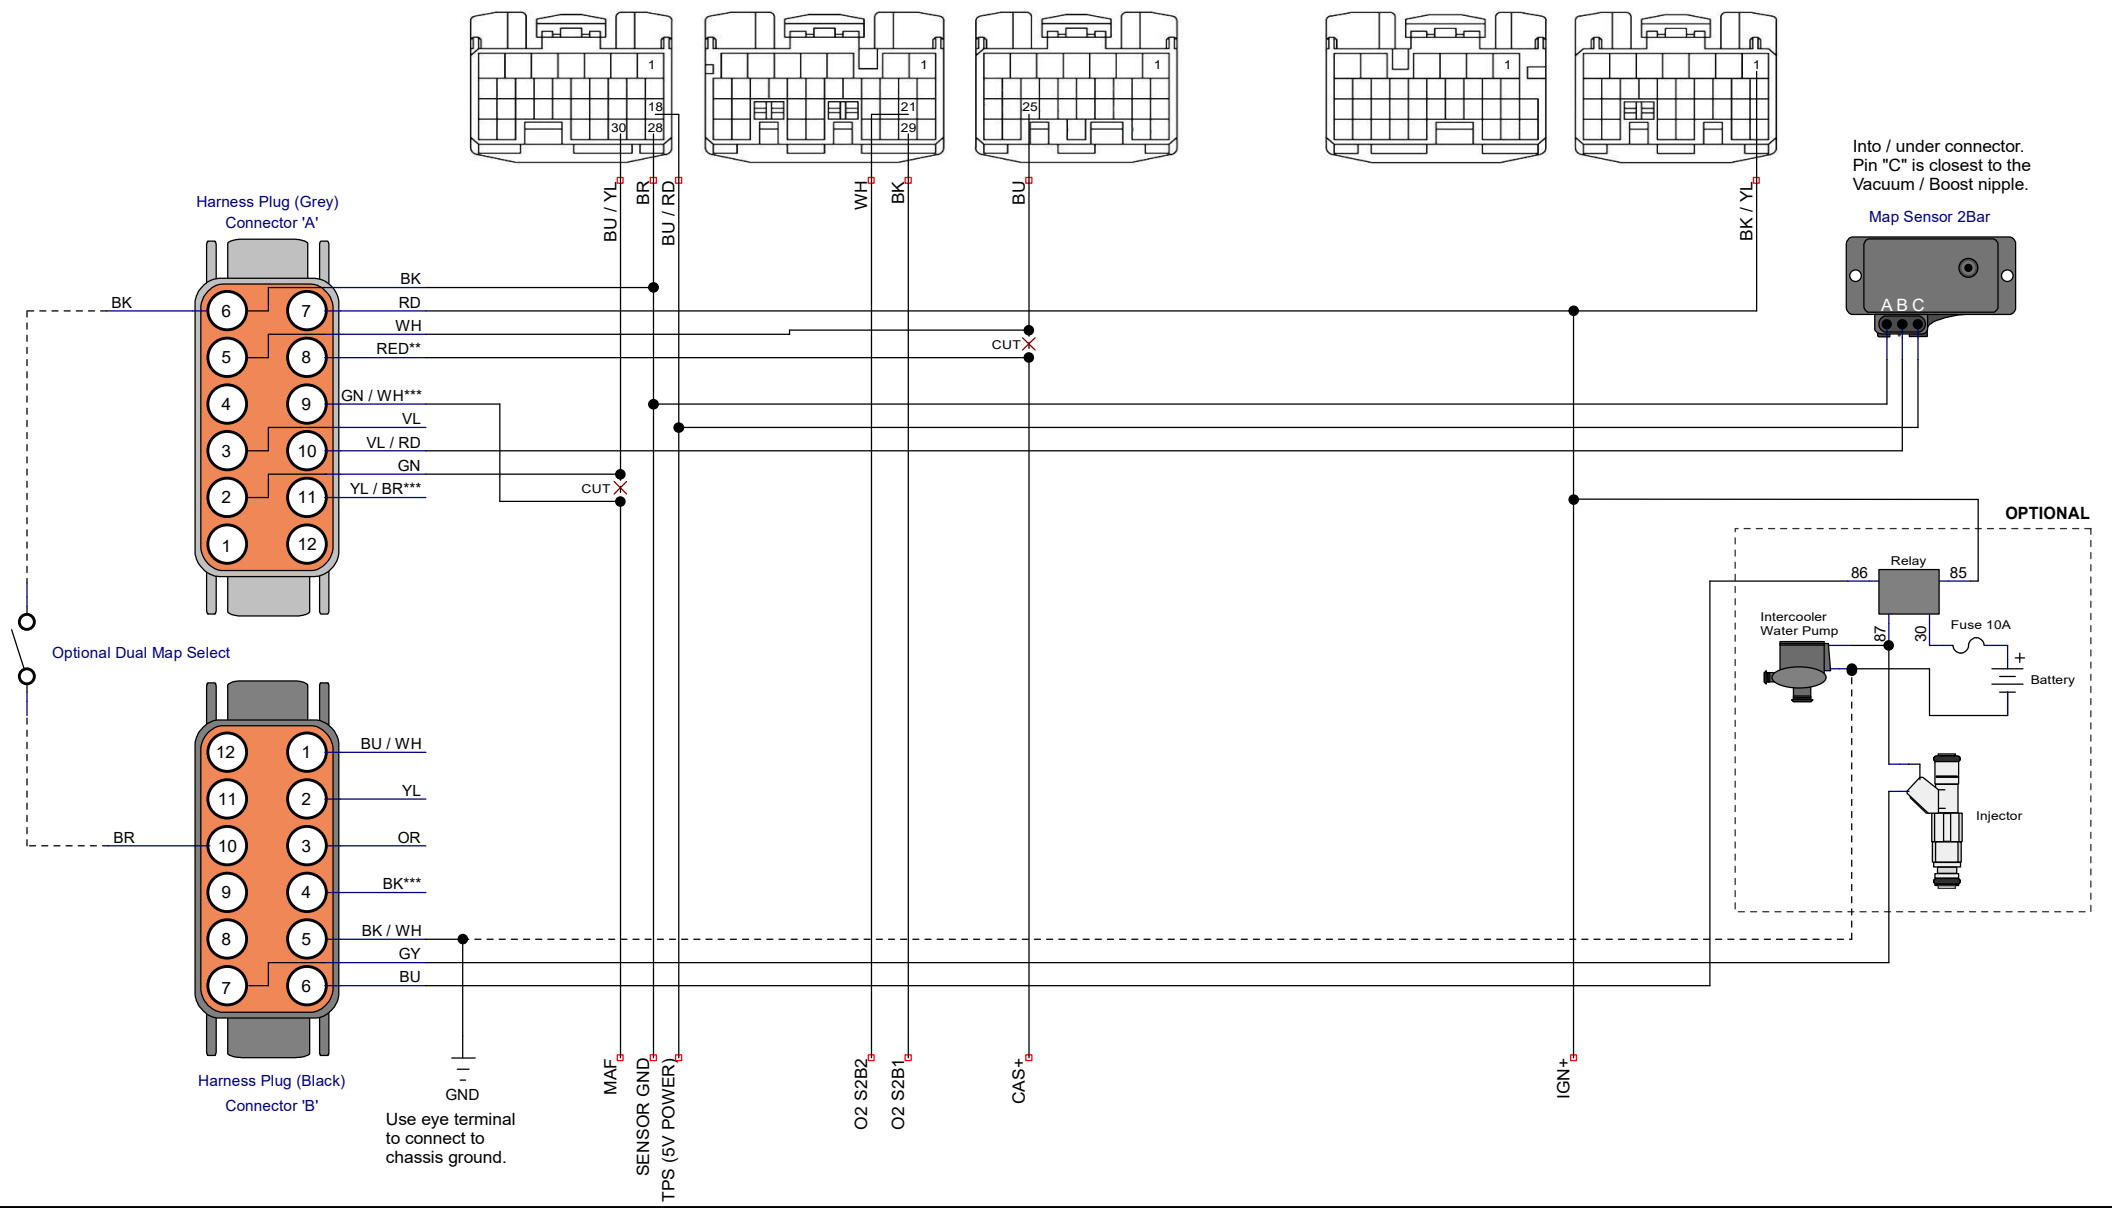

XEDE PROCESSOR WIRING DIAGRAM

* One or both chassis grounds must be connected if any of the following XEDE features are to be used: Water spray, boost control, auxiliary injector drive.

** Red wire in 3 core shielded cable.

*** Wire colour may have changed due to manufacturing shortages. Wire trace colour can change subject to availability. Function remains the same.

DO NOT terminate the shield wire in the 3 core cable.

On some versions of the harness there is 2 black wires, DO NOT use the black wire from the shielded cable unless specifically instructed.

Title
Toyota LandCruiser 100 Series 2UZ-FE Post 2003 AT

Author
SMH
ChipTorque

File
\\PTORQUE\Desktop\XWD\T LC 100 2UZ-FE.dsn

Document
XWD

Revision
1.0

Date
25/01/2017

Sheets
1