


ECU TERMINALS - VIEW FROM BACK OF CONNECTORS (WIRE)

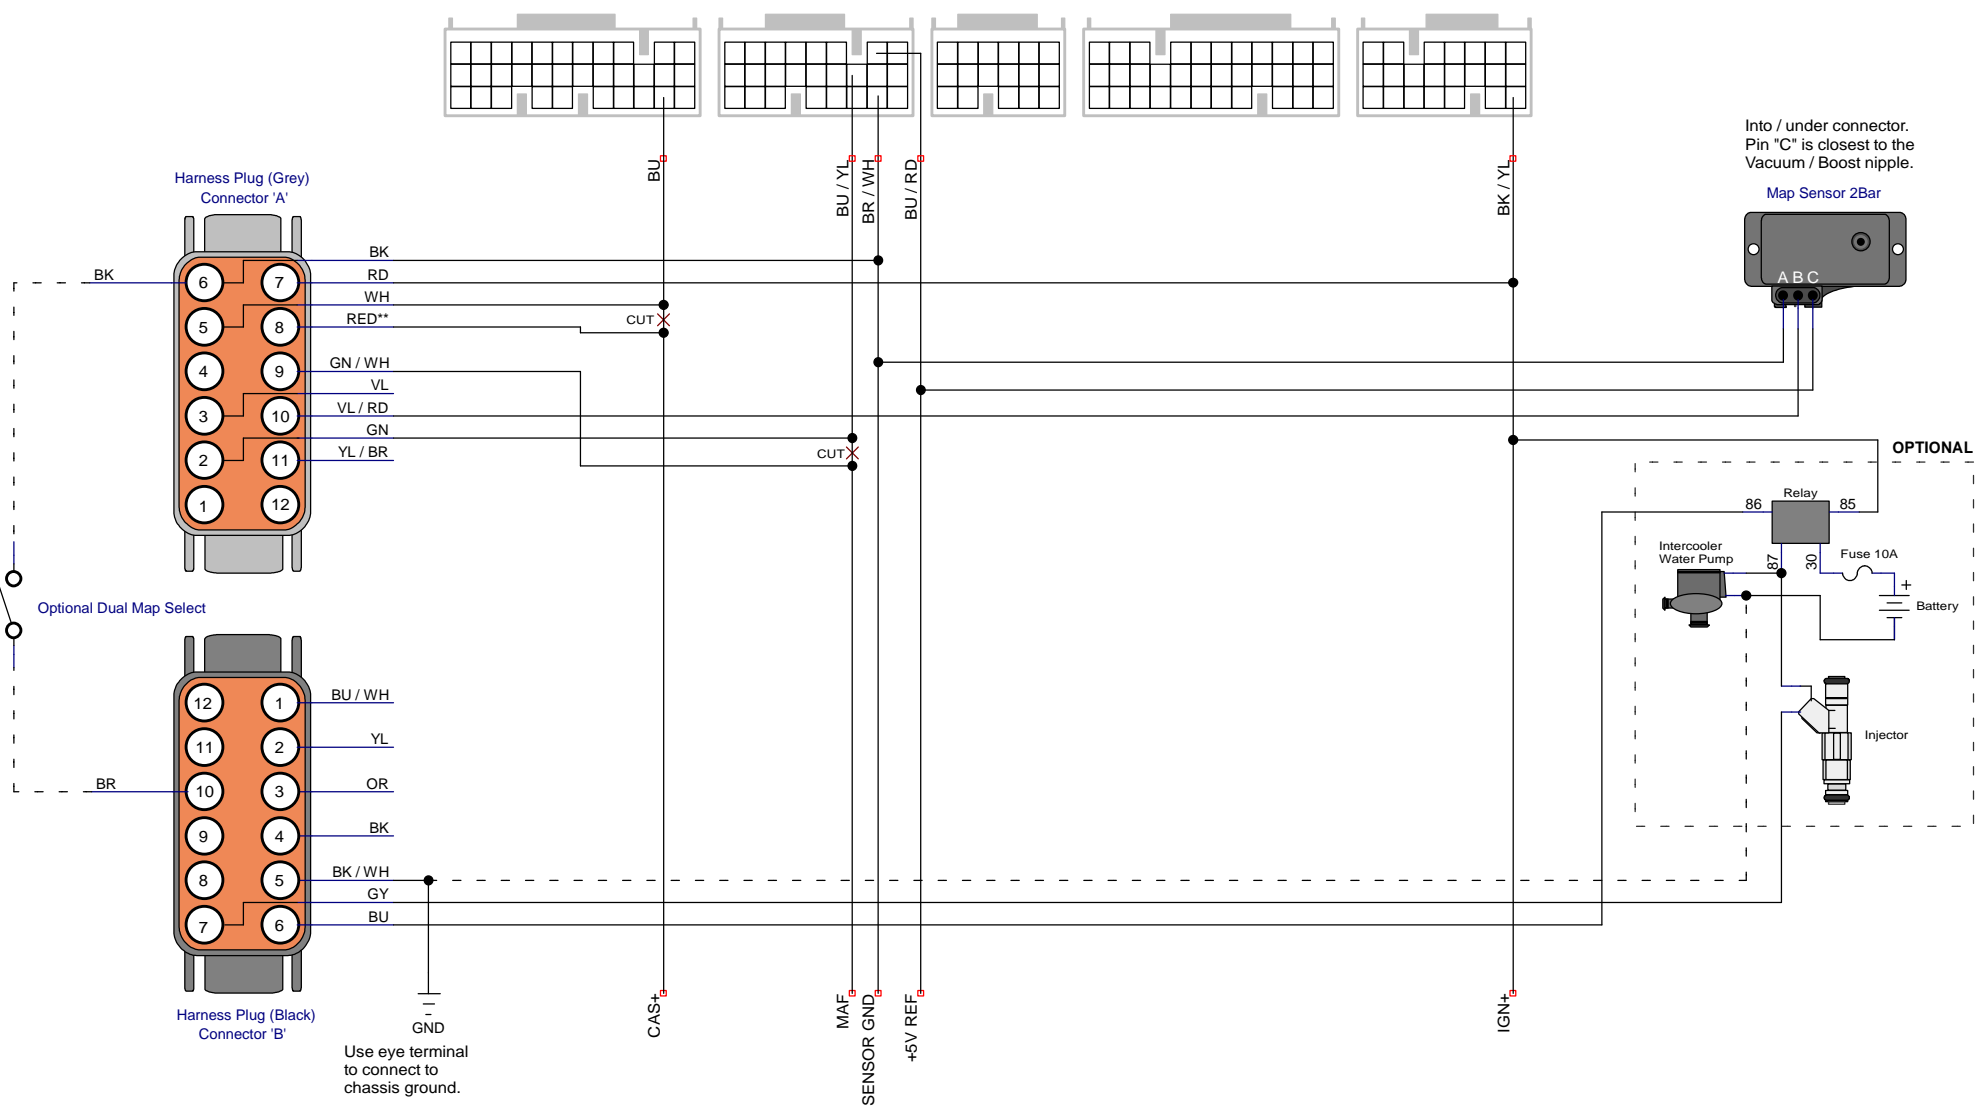

XEDE PROCESSOR WIRING DIAGRAM

ECU can stay powered up for as long as 30 minutes after key off. Move ignition key away from car and wait before disconnect / installation.

* One or both chassis grounds must be connected if any of the following XEDE features are to be used: Water spray, boost control, auxiliary injector drive.
 ** Red wire in 3 core shielded cable.

DO NOT terminate the shield wire in the 3 core cable.
 There are 2 black wires, DO NOT use the black wire from the shielded cable unless specifically instructed.
 Wire trace colour can change subject to availability.

Title Lexus LX470		
Author SMH ChipTorque		
File y.CHIPTORQUE\Desktop\XWD\L LX470 2UZ.dsn	Document XWD	
Revision 1.0	Date 12/09/2017	Sheets 1