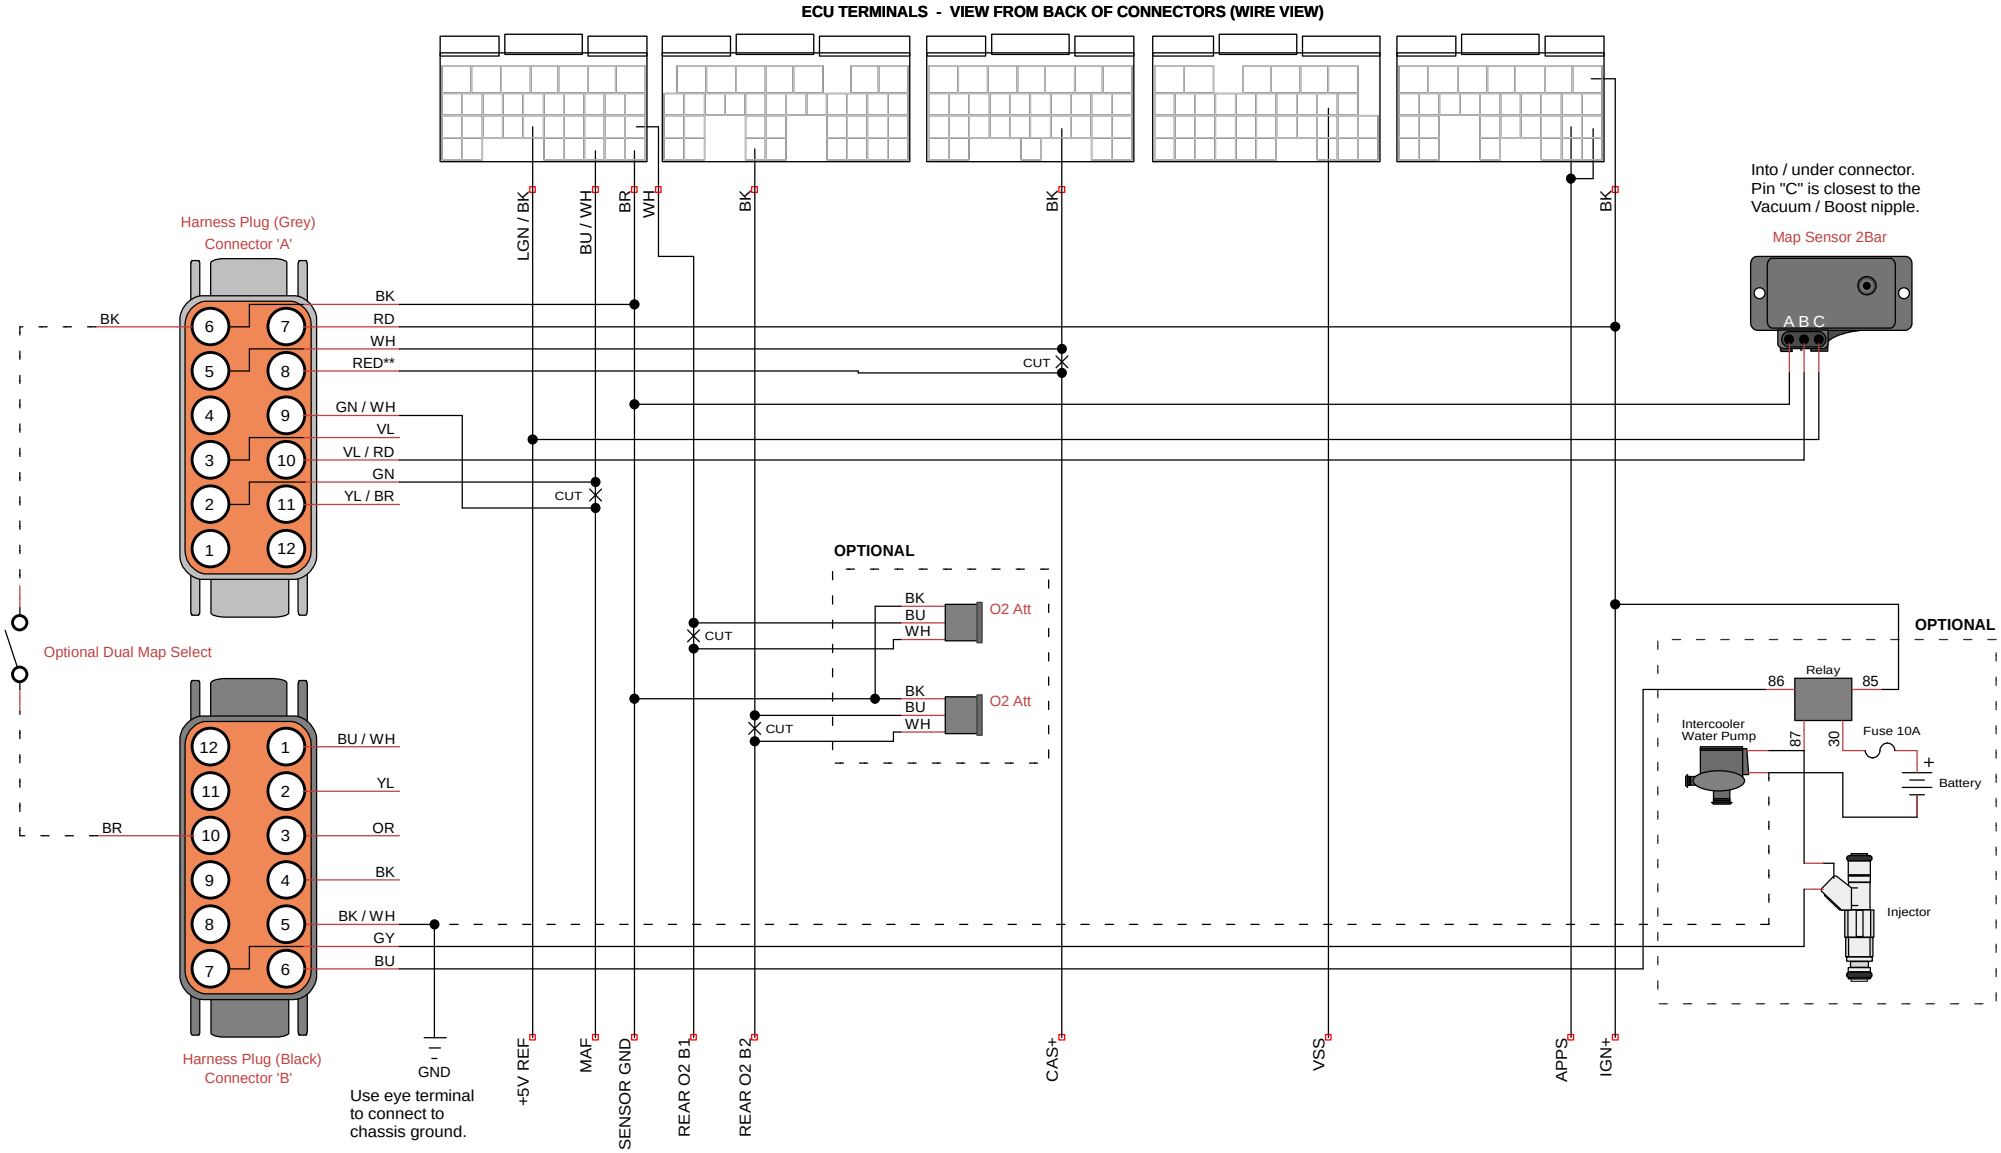

XEDE PROCESSOR WIRING DIAGRAM

ECU can stay powered up for as long as 30 minutes after key off. Move ignition key away from car and wait before disconnect / installation.

* One or both chassis grounds must be connected if any of the following XEDE features are to be used: Water spray, boost control, auxiliary injector drive.
** Red wire in 3 core shielded cable.

DO NOT terminate the shield wire in the 3 core cable.
There are 2 black wires, DO NOT use the black wire from the shielded cable unless specifically instructed.
Wire trace colour can change subject to availability.

Title Toyota Hilux 1GR-FE 2008		
Author SMH ChipTorque		
File ey.CHIPTORQUE\Desktop\XWD\T Hilux 1GR.dsn		Document XWD
Revision 1.0	Date 30/05/17	Sheets 2